VOPEX® Series

VOPEX-C5VA/C5V-x(C) VOPEX-C5SVA/C5SV-x VOPEX-C5HDTV/C5HDA-x VOPEX-M12V-4

Video/Audio or Video Only Splitter/Extender

Installation and Operation Manual



TRADEMARK

VOPEX is a registered trademark of Network Technologies Inc in the U.S. and other countries.

COPYRIGHT

Copyright © 2003, 2012 by Network Technologies Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Network Technologies Inc, 1275 Danner Drive, Aurora, Ohio 44202.

CHANGES

The material in this guide is for information only and is subject to change without notice. Network Technologies Inc reserves the right to make changes in the product design without reservation and without notification to its users.

WARNING: Never connect a VOPEX Series VOPEX-C5VA / -C5V/ -C5SVA / -C5V/ -C5HDTV / or -C5HDA -x Extender/Splitter to an Ethernet card, Ethernet router, hub or switch or other Ethernet RJ45 connector of an Ethernet device. Damage to devices connected to the Ethernet may result.

Note: CAT5 connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products should not be run underground, outdoors or between buildings.

WARNING: Outdoor or underground runs of CAT5 cable could be dangerous and will void the warranty.

TABLE OF CONTENTS

Introduction	1
Materials	2
Features and Functions	3
Limitations	
Preparation for Installation	5
VOPEX Installation	
VOPEX-C5VA-x and VOPEX-C5V-x	
VOPEX-C5SVA-x and VOPEX-C5SV-x	
VOPEX-C5HDTV-x	
VOPEX-C5HDA-x	
Receiver Installation	
ST-C5VA-R-600 and ST-C5V-R-600 Receiver	
ST-C5SVA-R-600 and ST-C5SV-R-600 Receiver	
ST-C5HDTV-R-600 and ST-C5HDA-600 Receiver	
Connect the CAT5 cable	
Plug-in and Boot Up	
Installation for VOPEX-M12V-4 and ST-M12V-4	
Video Quality Adjustment	19
VOPEX-C5VA-x / -C5SVA-x / -C5HDTV-x / -C5HDA-x	
VOPEX-C5V-x / -C5SV-x	
Technical Specifications	
Interconnection Cable Wiring Method	
RJ45 Connector Wiring	
M12 Connector Wiring	
Troubleshooting	
Warranty Information	24

TABLE OF FIGURES

Figure 1- Connecting a VOPEX-C5VA-8 to a CPU	6
Figure 2- Connect Local User components and CAT5 cable to VOPEX-C5VA-8	
Figure 3- Connecting a VOPEX-C5SVA-8 to a CPU	
Figure 4- Connect Local User components and CAT5 cable to VOPEX-C5SVA-8	
Figure 5- Connect HD Video and Stereo Audio sources	10
Figure 6- Connect local HDTV and stereo speakers	
Figure 7- Connect HD Video and Digital Audio sources	12
Figure 8- Connect HDTV and Digital Audio devices	
Figure 9- Connect the Extended Components to the ST-C5VA-R-600 Receiver	
Figure 10- Connect the Extended Components to the ST-C5SVA-R-600 Receiver	. 15
Figure 11- Connect the Extended Components to the Receiver	. 16
Figure 12- Connect the CAT5 cable to the Receiver	16
Figure 13- Connect an AC adapter to a ST-C5VA-R-600 Receiver	17
Figure 14- Connections for VOPEX with M12 Connectors	
Figure 15- M12 Connector Wiring Pinout	. 18
Figure 16- Video Adjust button for manual video quality adjustment	19
Figure 17- Video quality adjustment buttons on ST-C5V-600 Receiver	19
Figure 18- View looking into RJ45 female	22

INTRODUCTION

The VOPEX® Series Cat5 Video/Audio Splitter/Extender (VOPEX) is designed to enable one Video/Audio source to be viewed and heard in 4, 8, or 16 different remote locations. Remote video and audio devices can be located as much as 600 feet away from the source via Category 5 unshielded twisted-pair cable. The VOPEX-C5VA-x also allows a local video and audio device to be located near the source.

Models:

VOPEX-C5VA-x(C) Video/Audio Splitter/Extender for VGA video and line level analog audio VOPEX-C5V-x(C) Video-Only Splitter/Extender for VGA video (No Audio Support) VOPEX-C5SVA-x S-Video/Audio Splitter/Extender for S-Video and line level analog audio VOPEX-C5SV-x S-Video-Only Splitter/Extender for S-Video (No Audio Support) VOPEX-C5HDTV-x HD Video/Stereo Audio Splitter/Extender for high definition video and stereo audio VOPEX-C5HDA-x HD Video/Digital Audio Splitter/Extender for high definition video and digital audio VOPEX-M12V-4 4-Port Video Extender for VGA video with M12 connectors (No Audio Support)

x = 4,8, or 16 for the number of Receivers that can be connected.

Note: If the audio support is not present, please disregard all audio references.

The VOPEX-C5VA VGA Audio/Video Splitter/Extender via CAT5 will broadcast up-to-the-minute information to multiple remote monitors in real time. This high-resolution VGA video splitter (video port expander) is the ideal solution for any application requiring the flexibility to share information with several locations. Optional audio functionality using self-powered stereo speakers enhances your presentation.

The VOPEX C5HDTV/HDA Audio/Video Splitter/Extender via CAT5 is ideal for systems where high resolution YPbPr component video signals along with analog or digital audio signals must be transmitted long distances to multiple displays and speakers.

Possible digital video and audio sources include a DVD player, cable television box, home entertainment system, etc.. Digital audio devices include a HDTV, Home Theater System, Digital Audio Receiver, or Digital Speaker set, etc.. Some stereo line-level audio source and devices include HDTV Speakers, Home Theater or Stereo System, Stereo Amplifier, Headphones, and Computer Speakers.

The VOPEX Series Video/Audio Splitter/Extender is extremely simple to install and has been thoroughly tested to insure reliable performance. Through the use of Category 5 unshielded twisted-pair cable it is possible to economically increase the flexibility of a computer/home entertainment system. Here are some of the features and ways this can benefit the user:

- Allows the placement of monitors/HDTVs and self-powered stereo speakers/amplifiers in different remote locations where only these parts are needed.
- Provides an additional local access port allowing the A/V source to viewed and heard locally.
- Compatible with
 - XGA, VGA, and SVGA systems (VOPEX-C5VA / -C5V models only)
 - all video sources supporting s-video (VOPEX-C5SVA / -C5SV models only)
 - High and Standard Definition YPbPr component video, S-Video, or composite video (VOPEX-C5HDTV / -C5HDA models only)
- Provides crisp and clear resolution up to 1024x768 (VOPEX-C5VA / -C5V models only) or 800 x 600 (VOPEX-C5SVA / -C5SV models only) @ 60Hz at 600 ft.
- ST-C5HDTV / -C5HDA models support 480i (interlaced), 480p (progressive), 720i, 720p, 1080i, and 1080p formats.
- Video quality adjustment is automatic for varying lengths of CAT5 cable (models with audio support only)
- 'Video Adjustment' button allows video quality to be re-adjusted without powering down the system. (Button is on VOPEX-C5VA / -C5SVA only- video quality adjustment is performed at Receiver for VOPEX-C5V / -C5SV.)
- Digital transmission of audio signals reduces any loss in quality.
- Compatible with all NTI A/V switches and splitters, enabling the joining of products to create a system that satisfies all networking needs.


MATERIALS

Materials Included with this kit:

- > VOPEX-C5VA-x / -C5V-x / -C5SVA-x / -C5SV-x / -C5HDTV-x / -C5HDA-x /-M12V-4 (one of these)
- 120VAC or 240VAC at 50 or 60Hz-9VDC/1.5A AC Adapter (not included with M12) -Or-
- 120VAC or 240VAC at 50 or 60Hz-5VDC/3A AC Adapter (VOPEX-C5V(A)-4C/8C models only)
- ▶ Line cord, country specific (not included with M12)
- > CD with a pdf file of this manual and pdf file of a Quick Installation Guide
- Quick Installation Guide

Additional materials Included:

For Model	Video Cable	Stereo plug Cable
VOPEX-C5VA-x(C)	VEXT-3	SA-3-MM
VOPEX-C5V-x(C)	VEXT-3	Not applicable
VOPEX-C5SVA-x	SVEXT-3-MM	SA-3-MM
VOPEX-C5SV-x	SVEXT-3-MM	Not applicable
VOPEX-C5HDTV-x	CMPSAEXT-1.5-MM	A (see image to right)
VOPEX-M12V-4	VEXT-3	Not applicable

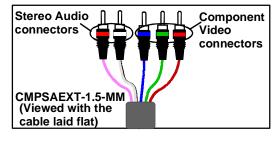

Legend:

- x= 4, 8, or 16 for number of ports
- MM- indicates male-male connectors
- VEXT-3- 15HD male-female video cable for connecting the VOPEX to the video source
- SA-3-MM 3.5mm stereo plug -stereo plug cable for connecting the VOPEX to the audio source
- SVEXT-3-MM 4-pin miniDIN male-male s-video cable- for connecting the VOPEX-C5SVA / -C5SV-x to the video source
- CMPSAEXT-1.5-MM 5-in-1 coax cable (3-75 ohm component video and 2-RCA stereo)-for connecting VOPEX-C5HDTV-x to the audio and video source

Additional materials not supplied but are required:

- CAT5 unshielded twisted-pair cable(s) terminated with RJ45 connectors wired straight thru- pin 1 to pin 1, etc. (see pg. 14 for proper EIA/TIA 568B wiring method)
- > One or more of the following XTENDEX receivers:


Receiver	For use with
ST-C5VA-R-600	VOPEX-C5VA-x(C)
ST-C5V-R-600	VOPEX-C5V-x(C)
ST-C5SVA-R-600	VOPEX-C5SVA-x
ST-C5SV-R-600	VOPEX-C5SV-x
ST-C5HDTV-R-600	VOPEX-C5HDTV-x
ST-C5HDA-R-600	VOPEX-C5HDA-x
ST-M12V-R-600	VOPEX-M12V-4

Contact your nearest NTI distributor or NTI directly for all of your KVM needs at 800-RGB-TECH (800-742-8324) in US & Canada or 330-562-7070 (Worldwide) or at our website at <u>www.networktechinc.com</u> and we will be happy to be of assistance.

> Cables for connecting the HD video and stereo/digital audio devices to the VOPEX-C5HDTV and VOPEX-C5HDA :

DESCRIPTION	PURPOSE
75 ohm RCA cable with green, blue, red connectors	Connect HDTV to VOPEX
Coax cable for digital audio	Connect audio device to VOPEX (VOPEX- C5HDA only)
Stereo audio cable	Connect stereo audio device to VOPEX (VOPEX-C5HDTV only)

FEATURES AND FUNCTIONS

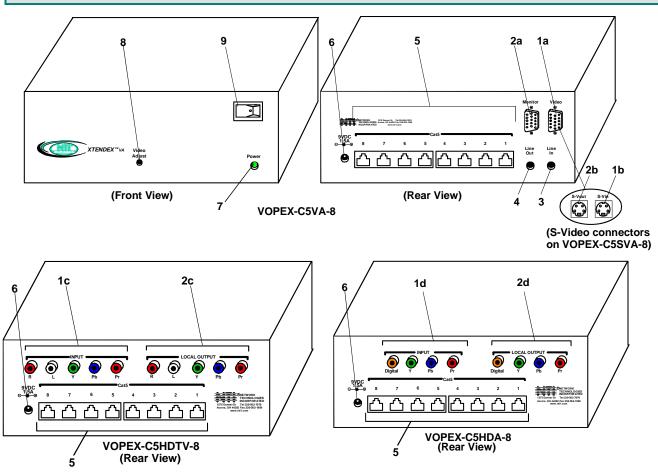

1a. Video -15HD male connector - for connecting the cable from the video source

- 1b. S-Vin 4-pin miniDIN female connector for connecting the cable from the video source
- 1c. INPUT RCA connectors for connecting component video (Y, Pb, Pr) and stereo audio source (R,L)
- 1d. INPUT -RCA connectors for connecting component video (Y, Pb, Pr) and digital audio source (Digital)
- 2a. Monitor -15HD female connector for connecting the local user's monitor
- 2b. S-Vout 4-pin miniDIN female S-Video Connector for connecting the local user's S-video compatible monitor
- 2c. LOCAL OUTPUT RCA connectors for connecting local component video (Y, Pb, Pr) and stereo audio device (R,L)
- 2d. LOCAL OUTPUT RCA Connectors for connecting local component video (Y, Pb, Pr) and digital audio device (Digital)
- Line In 3.5mm female stereo audio connector- for connecting the cable from the audio source (VOPEX-C5VA/-C5SVA models only)
- Line Out 3.5mm female stereo audio connector- for connecting the local self-powered stereo speakers (VOPEX-C5VA/-C5SVA only)
- 5. Cat 5 RJ45 female- for connecting CAT5 cables from XTENDEX Receivers
- 6. 9VDC 1.5A- connection jack for the 9VDC 1.5A AC adapter
- 7. Power Green LED- illuminates when power has been supplied to the VOPEX
- 8. Video Adjust forces the VOPEX to re-adjust the video on all channels (models with audio support only)
- 9. Power switch- to turn unit ON and OFF


NTI EXTENDEX SERIES SPLITTER/EXTENDER

10a. 15HD female VGA video connector - for connecting the remote user's monitor

10b. 4-pin miniDIN female S-Video connector - for connecting the remote user's S-video compatible monitor

10c. RCA Video Connectors - connection for remote component video (Y,Pb,Pr) cable

- 11. Cat 5- RJ45 female for connecting CAT5 cable from the VOPEX
- 12. **Traffic LED** communication indicator- illuminates when there is valid communication between the VOPEX and the XTENDEX Receiver. (illuminates only in models with audio support)
- 13. Power LED- illuminates when power has been supplied to the unit
- 14a. Audio Connector- 3.5mm female stereo audio connector- for connecting remote self-powered speakers
- 14b. Stereo Audio Connectors-RCA- connection for right and left channel stereo audio amplifier
- 14c. Digital Audio Connector-RCA- connection for digital audio device
- 15. 9VDC 1.0A- connection jack for 9VDC 1A AC adapter

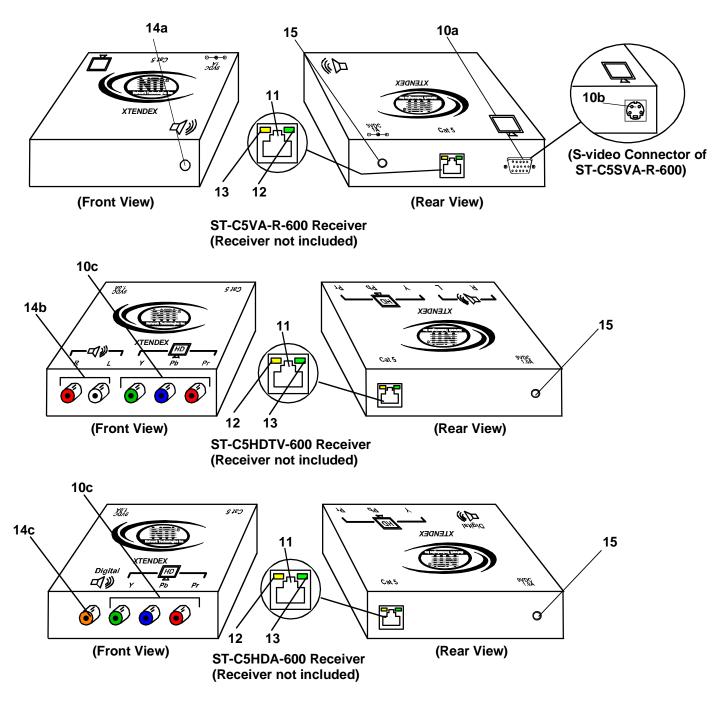

LIMITATIONS

- The audio input of the VOPEX-C5VA is compatible with the following standard CPU audio outputs:
 - Line out typically lime green in color
 - Speaker out- typically orange in color
 - Headphone out- typically located on the CD-ROM
- The audio outputs of the VOPEX and the XTENDEX Receiver are compatible with self-powered stereo speakers.

PREPARATION FOR INSTALLATION

- Locations should be chosen for the monitors and speakers that also have space to connect the VOPEX and XTENDEX Receivers within the distance provided by the cables. If extension cables are needed, contact NTI for the cables required.
- The CAT5 cables must be run to the locations where the VOPEX and XTENDEX Receivers will be connected. Be careful to route the cables away from any sources of magnetic fields or electrical interference that might reduce the quality of the video signal (i.e. AC motors, welding equipment, etc.). **NOTE**: If CAT5 cable is already installed in the wall and there are RJ45 wall outlets, it will be necessary to obtain male-to-male straight through connection cables long enough to reach from the wall outlets to the connection locations of the VOPEX and XTENDEX Receivers.
- A properly grounded, polarized, and preferably surge-protected 120V or 240V electrical outlet (depending on the AC adapter being used) must be installed close enough to the connection location of the VOPEX and XTENDEX Receivers, monitors, stereo speakers, and CPU to plug them into.
- All cables should be installed in such a way that they do not cause stress on their connections to the equipment. Extended lengths of cable hanging from a connection may interfere with the quality of that connection. Secure cables as needed to minimize this.
- Properly shut down and disconnect the power from all devices to be separated. If other equipment is involved whose connections are being interrupted, be sure to refer to the instruction manuals for that equipment for proper disconnection and re-connection procedures before proceeding.

Note: CAT5 connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products should not be run underground, outdoors or between buildings.

WARNING: Outdoor or underground runs of CAT5 cable could be dangerous and will void the warranty.

VOPEX INSTALLATION

VOPEX-C5VA-x and VOPEX-C5V-x

Note: VOPEX-C5V-x Video Only Splitter/Extender does not have audio support. If the audio support is not present, please disregard all audio references.

- 1. Make connections between the VOPEX-C5VA-x and the audio and video source(s). (See Fig. 1.)
 - a) Connect the male15HD cable end of a VEXT-3 to the VGA connector on the back of the video source.
 - b) Connect the female 15HD cable end of the VEXT-3 cable to the 15HD male connector marked "Video" on the VOPEX-C5VA-x.
 - c) Connect one 3.5mm stereo plug end of the SA-3-MM cable into the 3.5mm female audio connector marked "line out", "spkr", or "headphones" on the audio source.

Notes:

If all 3 connectors are available, use the connector marked "line out".

The "line out" connector is typically lime green and may be marked with this symbol

The "spkr" connector is typically orange, and may be marked with this symbol 🛛 💻 测

The "headphones" connector may be marked with this symbol

d) Connect the other 3.5mm stereo plug end of the SA-3-MM cable into the 3.5mm female stereo audio connector marked "Line In" on the VOPEX-C5VA-x.

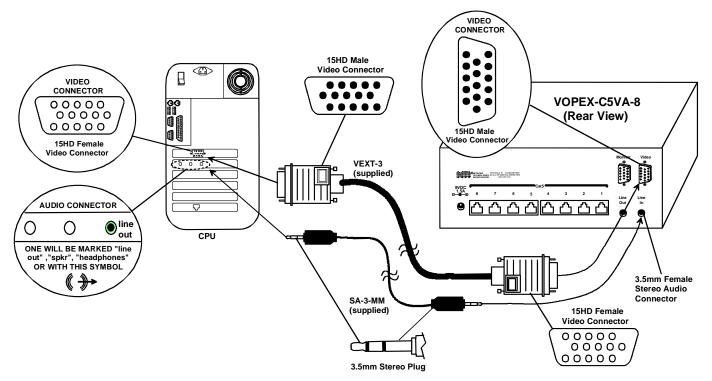


Figure 1- Connecting a VOPEX-C5VA-8 to a CPU

- 2. Connect the local user to the VOPEX-C5VA-x (see Fig. 2)
 - a) Connect the cable from the local user's VGA monitor to the 15HD female connector marked "Monitor" on the VOPEX-C5VA-x.
 - b) Connect the cable from the local speakers into the 3.5mm stereo audio connector marked "Line Out" on the VOPEX-C5VA-x.

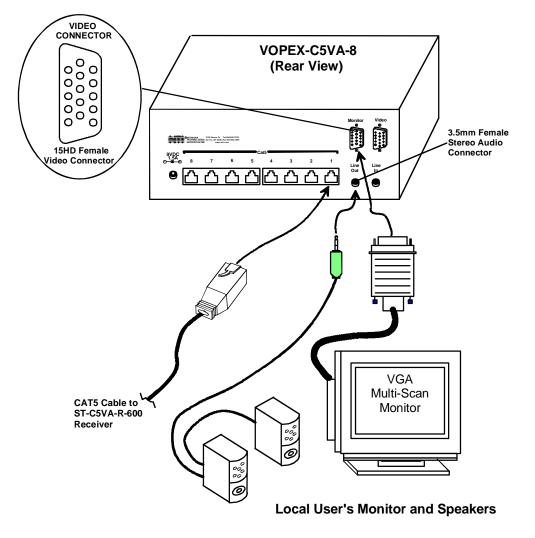


Figure 2- Connect Local User components and CAT5 cable to VOPEX-C5VA-8

- 3. Connect a CAT5 cable to any one of the "Cat5x" ports on the VOPEX-C5VA-x. (See Fig. 2) When properly inserted the cable end should snap into place.
- 4. Repeat step 3 for each ST-C5VA-R-600 Receiver to be connected to the VOPEX-C5VA-x.

Note: If an RJ45 wall outlet is being used, connect the other end of the extension cable to the RJ45 wall outlet.

WARNING: Never connect the VOPEX-C5VA-x Extender/Splitter to an Ethernet card, Ethernet router, hub or switch or other Ethernet RJ45 connector of an Ethernet device. Damage to devices connected to the Ethernet may result.

VOPEX-C5SVA-x and VOPEX-C5SV-x

Note: VOPEX-C5SV-x S-Video Only Splitter/Extender does not have audio support. If the audio support is not present, please disregard all audio references.

- 1. Make connections between the VOPEX-C5SVA-x and the audio and video source(s). (See Fig. 3)
 - a) Connect a 4-pin miniDIN cable end of a SVEXT-3-MM to the VGA connector on the back of the video source.
 - b) Connect the other 4-pin miniDIN cable end of the SVEXT-3-MM cable to the 4-pin miniDIN female connector marked "S-Vin" on the VOPEX-C5SVA-x.
 - c) Connect one 3.5mm stereo plug end of the SA-3-MM cable into the 3.5mm female audio connector marked "line out", "spkr", or "headphones" on the audio source.

Notes:

If all 3 connectors are available, use the connector marked "line out".

The "line out" connector is typically lime green and may be marked with this symbol (

The "spkr" connector is typically orange, and may be marked with this symbol 🛛 🗮 测

The "headphones" connector may be marked with this symbol

d) Connect the other 3.5mm stereo plug end of the SA-3-MM cable into the 3.5mm female stereo audio connector marked "Line In" on the VOPEX-C5SVA-x.


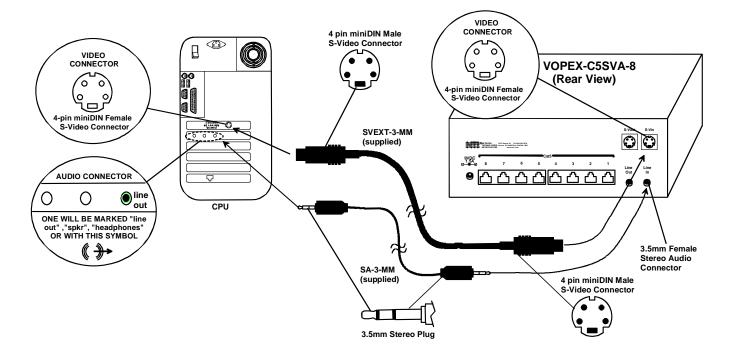


Figure 3- Connecting a VOPEX-C5SVA-8 to a CPU

- 2. Connect the local user to the VOPEX-C5SVA-x (see Fig. 4)
 - a. Connect one end of another SVEXT-xx-MM cable to the 4-pin miniDIN female connector marked "S-Vout" on the VOPEX-C5SVA-x.
 - b. Connect the other end of the SVEXT-xx-MM cable to the 4-pin miniDIN female connector on the local s-video display.
 - c. Connect the cable from the local speakers into the 3.5mm stereo audio connector marked "Line Out" on the VOPEX-C5SVA-x.

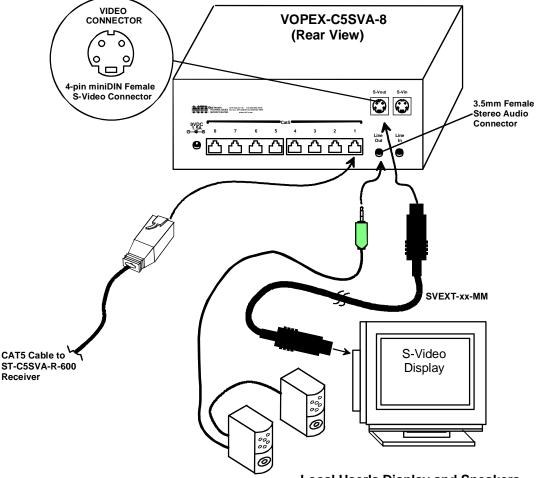

Local User's Display and Speakers

Figure 4- Connect Local User components and CAT5 cable to VOPEX-C5SVA-8


- 3. Connect a CAT5 cable to any one of the "Cat5x" ports on the VOPEX-C5SVA-x. (See Fig. 4) When properly inserted the cable end should snap into place.
- 4. Repeat step 3 for each ST-C5SVA-R-600 Receiver to be connected to the VOPEX-C5SVA-x.

Note: If an RJ45 wall outlet is being used, connect the other end of the extension cable to the RJ45 wall outlet.

WARNING: Never connect the VOPEX-C5SVA-x Extender/Splitter to an Ethernet card, Ethernet router, hub or switch or other Ethernet RJ45 connector of an Ethernet device. Damage to devices connected to the Ethernet may result.

VOPEX-C5HDTV-x

- 1. Make connections between the VOPEX-C5HDTV-x and the stereo audio and HD video source. (See Fig. 5.)
 - a) Connect the video ends of the CMPSAEXT-1.5-MM RCA coax cable (supplied) to the HD video source.
 - b) Connect the video ends on the other end of the CMPSAEXT-1.5-MM RCA coax cable to connectors marked "INPUT" on the VOPEX-C5HDTV-x. Connect the RCA cables to their proper matching colors- green to "Y", blue to "Pb", and red to "Pr".
 - c) Connect the stereo audio ends of the CMPSAEXT-1.5-MM cable between the audio source and the "R" (right channel) and "L" (left channel) connectors on the VOPEX.

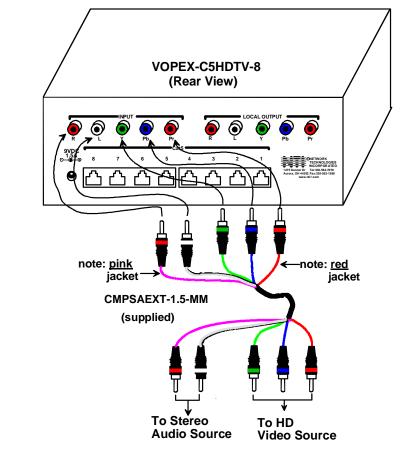


Note:

The jacket of the red RCA coax (on the CMPSAEXT-1.5-MM) for connection to the "R" (right channel) stereo connection is <u>pink.</u>

The jacket of the red RCA coax for connection to the "Pr" video connector is <u>red</u>.

Figure 5- Connect HD Video and Stereo Audio sources

- 2. Connect the local user to the VOPEX-C5HDTV-x (see Fig. 6)
 - a) Connect one end a set of 75 ohm RCA cables to an HDTV.
 - b) Connect the other end of the RCA coax cables to connectors marked "LOCAL OUTPUT" on the VOPEX-C5HDTV-x. Connect the RCA cables their proper matching colors- green to "Y", blue to "Pb", and red to "Pr".
 - c) Connect a stereo audio cable between a stereo audio device and the "R" (right channel) and "L" (left channel) connectors on the VOPEX under "LOCAL OUTPUT".

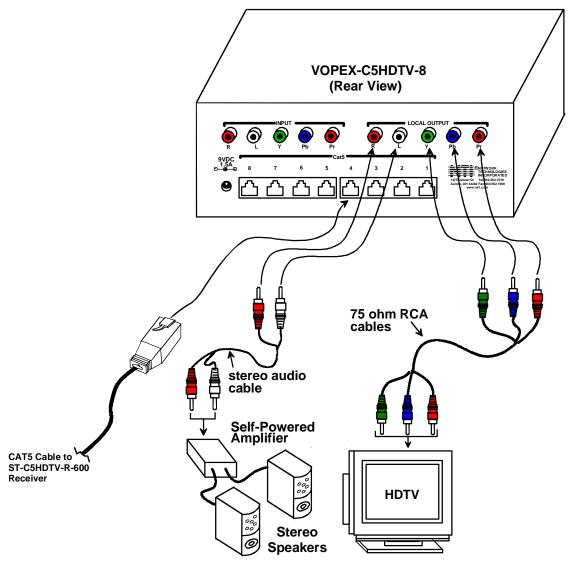

Locally connected devices

Figure 6- Connect local HDTV and stereo speakers

- 3. Connect a CAT5 cable to any one of the "Cat5x" ports on the VOPEX-C5HDTV-x. (See Fig. 6) When properly inserted the cable end should snap into place.
- 4. Repeat step 3 for each ST-C5HDTV-R-600 Receiver to be connected to the VOPEX-C5HDTV-x.

Note: If an RJ45 wall outlet is being used, connect the other end of the extension cable to the RJ45 wall outlet.

WARNING: Never connect the VOPEX-C5HDTV-x Extender/Splitter to an Ethernet card, Ethernet router, hub or switch or other Ethernet RJ45 connector of an Ethernet device. Damage to devices connected to the Ethernet may result.

VOPEX-C5HDA-x

- 1. Make connections between the VOPEX-C5HDA-x and the digital audio and HD video source. (See Fig. 7.)
 - a) Connect a set of 75 ohm RCA cables to the HD video source.
 - b) Connect the other end of the RCA coax cables to connectors marked "INPUT" on the VOPEX-C5HDA-x. Connect the RCA cables to their proper matching colors- green to "Y", blue to "Pb", and red to "Pr".
 - c) Connect a coax cable for digital audio between a digital audio source and the connector under "INPUT" marked "Digital" on the VOPEX

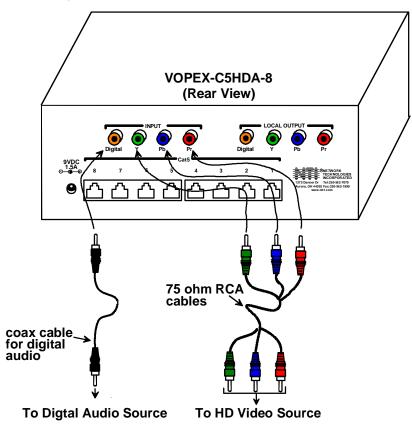


Figure 7- Connect HD Video and Digital Audio sources

- 2. Connect the local user to the VOPEX-C5HDA-x (see Fig. 7)
 - a) Connect one end a set of 75 ohm RCA cables to an HDTV.
 - b) Connect the other end of the RCA coax cables to connectors marked "LOCAL OUTPUT" on the VOPEX-C5HDTV-x. Connect the RCA cables to their proper matching colors- green to "Y", blue to "Pb", and red to "Pr".
 - c) Connect a coax cable for digital audio between a digital audio device "Digital" connector on the VOPEX under "LOCAL OUTPUT".

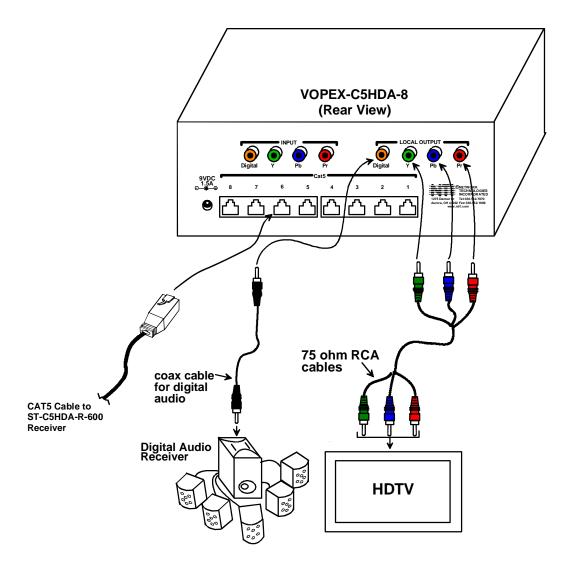


Figure 8- Connect HDTV and Digital Audio devices

- 3. Connect a CAT5 cable to any one of the "Cat5x" ports on the VOPEX-C5HDA-x. (See Fig. 8) When properly inserted the cable end should snap into place.
- 4. Repeat step 3 for each ST-C5HDA-R-600 Receiver to be connected to the VOPEX-C5HDA-x.

Note: If an RJ45 wall outlet is being used, connect the other end of the extension cable to the RJ45 wall outlet.

WARNING: Never connect the VOPEX-C5HDA-x Extender/Splitter to an Ethernet card, Ethernet router, hub or switch or other Ethernet RJ45 connector of an Ethernet device. Damage to devices connected to the Ethernet may result.

RECEIVER INSTALLATION

ST-C5VA-R-600 and ST-C5V-R-600 Receiver

Note: This section is applicable to both models of Receiver except for step 3. When installing ST-C5V-R-600 Receivers (no audio support), disregard step 3.

- 1. Position a ST-C5VA-R-600 Receiver such that the CAT5 cable, the monitor cable, speaker cable, and the AC adapter power connector can each reach the Receiver comfortably.
- 2. Connect the remote user's monitor cable to the female 15HD video connector on the Receiver.
- 3. Connect the remote user's speakers to the 3.5mm female stereo connector on the Receiver (see Fig. 9).

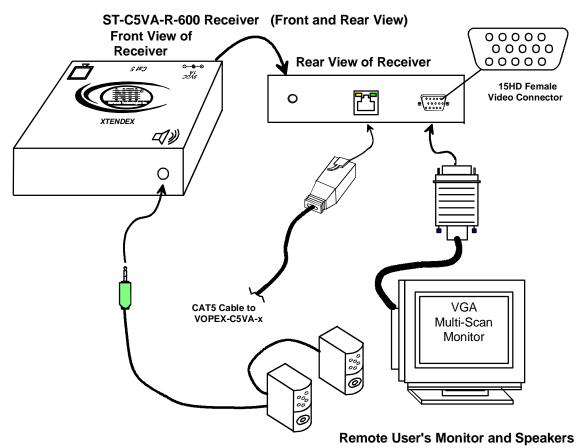


Figure 9- Connect the Extended Components to the ST-C5VA-R-600 Receiver

 Make sure the CAT5 cable has been installed in accordance with the "Preparation for Installation" instructions on page 5. Connect the CAT5 cable to the "Cat 5" port on the Receiver. (See Fig. 9) When properly inserted the CAT5 cable end should snap into place.

Note: If an RJ45 wall outlet is being used, connect the other end of the extension cable to the RJ45 wall outlet.


WARNING: Never connect the ST-C5VA-R-600 Receiver to an Ethernet card, Ethernet router, hub or switch or other Ethernet RJ45 connector of an Ethernet device. Damage to devices connected to the Ethernet may result.

5. Repeat steps 1-4 for each ST-C5VA-R-600 Receiver to be connected to the VOPEX-C5VA-x.

ST-C5SVA-R-600 and ST-C5SV-R-600 Receiver

Note: This section is applicable to both models of Receiver except for step 4. When installing ST-C5SV-R-600 Receivers (no audio support), disregard step 4.

- 1. Position a ST-C5SVA-R-600 Receiver such that the CAT5 cable, the SVEXT-xx-MM cable, speaker cable, and the AC adapter power connector can each reach the Receiver comfortably.
- 2. Connect one end of another SVEXT-xx-MM cable to the female 4-pin miniDIN video connector on the Receiver.
- 3. Connect the other end of the SVEXT-xx-MM to the female s-video connector of the remote s-video display.
- 4. Connect the remote user's speakers to the 3.5mm female stereo connector on the Receiver (see Fig. 10).

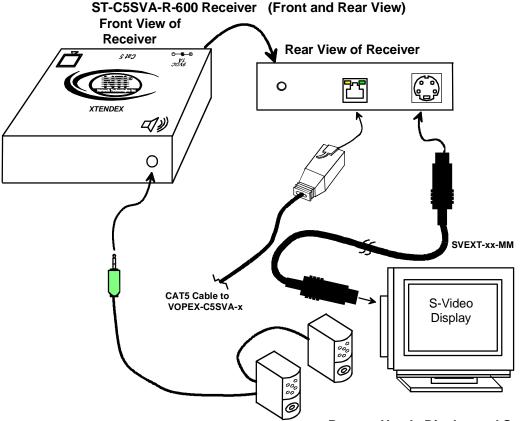

Remote User's Display and Speakers

Figure 10- Connect the Extended Components to the ST-C5SVA-R-600 Receiver

 Make sure the CAT5 cable has been installed in accordance with the "Preparation for Installation" instructions on page 5. Connect the CAT5 cable to the "Cat 5" port on the Receiver. (See Fig. 10) When properly inserted the CAT5 cable end should snap into place.

Note: If an RJ45 wall outlet is being used, connect the other end of the extension cable to the RJ45 wall outlet.

6. Repeat steps 1-4 for each ST-C5SVA-R-600 Receiver to be connected to the VOPEX-C5SVA-x.



WARNING: Never connect the ST-C5SVA-R-600 Receiver to an Ethernet card, Ethernet router, hub or switch or other Ethernet RJ45 connector of an Ethernet device. Damage to devices connected to the Ethernet may result.

ST-C5HDTV-R-600 and ST-C5HDA-600 Receiver

- 1. Position the ST-C5HDxx-R-600 Receiver such that the CAT5 cable, the HD television cable, the speakers, and the AC adapter power connector can each reach the Receiver comfortably.
- 2. Connect 75 ohm RCA cables between the remote HDTV and the RCA connectors marked "Y", "Pb", and "Pr" on the Receiver as shown in Fig. 11.
- 3. Connect coax cable for digital audio (ST-C5HDA-600 only) or stereo audio cable (ST-C5HDTV-600 only) between the audio connection(s) on the Receiver and the audio device. (See Fig. 11)

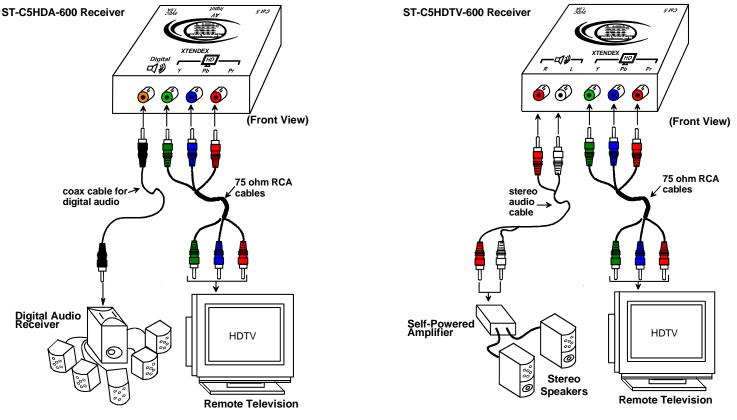


Figure 11- Connect the Extended Components to the Receiver

Connect the CAT5 cable

Make sure the CAT5 cable has been installed in accordance with the "Preparation for Installation" instructions on page 5. Connect the CAT5 cable to the "Cat 5" port on the Remote Unit. (See Fig. 12) When properly inserted the CAT5 cable end should snap into place.

Note: If an RJ45 wall outlet is being used, connect the other end of the extension cable to the RJ45 wall outlet.

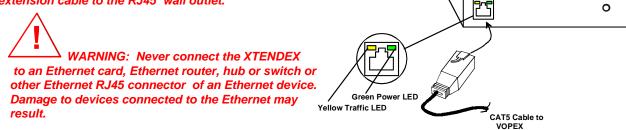


Figure 12- Connect the CAT5 cable to the Receiver

ST-C5HDTV-600 Receiver (Rear View)

Cat 5

хтеирех

970C

PLUG-IN AND BOOT UP

- 1. Plug the power cord from each video device and the power supply for each audio device into a power outlet.
- 2. Connect the **9VDC** <u>**1.5A**</u> AC adapter (or **5VDC 3A**, **see product markings**) power connector to the power port on the VOPEX.
- 3. Connect a **9VDC** <u>**1A**</u> **AC** adapter to each XTENDEX Receiver. Make sure the power connectors go into each port all the way.

WARNING: The AC adapter for the Receivers is rated at 1A only. Be sure to plug the 9VDC 1A AC adapter into the Receiver, NOT into the VOPEX! The 1A AC adapter, if connected to the VOPEX, is not powerful enough to supply the VOPEX for very long and will be damaged.

4. Plug each AC adapter into a power outlet. The green LED on the VOPEX and the yellow LED on the RJ45 connector of each XTENDEX Receiver should illuminate, indicating that a proper power connection has been made to them. (See Fig. 13)

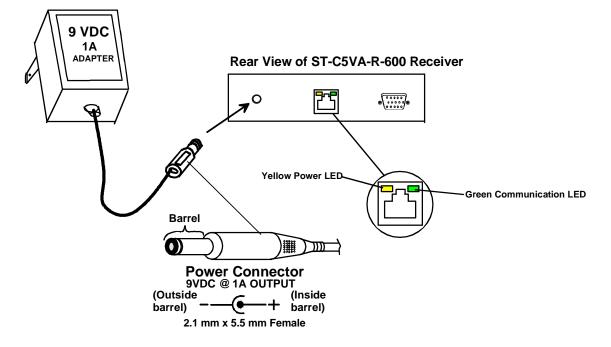


Figure 13- Connect an AC adapter to a ST-C5VA-R-600 Receiver

5. Turn ON the audio and video source(s), stereo speakers, and monitors. They should react as if they were directly connected to each other.

Note: The green LED on the RJ45 connector of each XTENDEX Receiver will blink anytime data traffic is passing between the VOPEX and the XTENDEX Receivers, indicating proper CAT5 cable connection and communication. (See Fig. 13)

INSTALLATION FOR VOPEX-M12V-4 AND ST-M12V-4

Installation of the VOPEX splitter and receivers with M12 connectors is the same as those with RJ45 connectors, except that M12 male connectors must be applied to the ends of the CAT5 cables. See the images below for the required connections and proper wiring pinout of the male M12 connector (wired to EIA/TIA 568B standard).

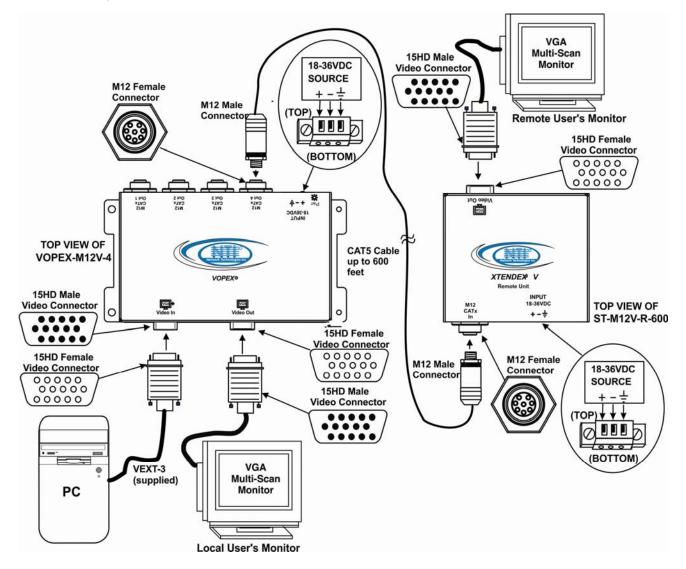


Figure 14- Connections for VOPEX with M12 Connectors

Wire Attachment	Mating Eaco	CAT5 CABLE WIRE	M12 CONNECTOR PIN
Side of M12 Male	Mating Face of M12 Male	WHITE/ORANGE	6
	5	ORANGE	4
(4 ⁵)	6 0 1	WHITE/GREEN	5
	$\langle \circ \rangle$	BLUE	7
	$7(\circ \circ \circ)_3$	WHITE/BLUE	1
\2 ° 1/		GREEN	8
	1 2	WHITE/BROWN	2
		BROWN	3

Figure 15- M12 Connector Wiring Method

VIDEO QUALITY ADJUSTMENT

VOPEX-C5VA-x / -C5SVA-x / -C5HDTV-x / -C5HDA-x

When powering ON the VOPEX-C5VA-x/-C5SVA-x/-C5HDTV-x/-C5HDA-x, video quality adjustment is done automatically to assure the image is as clear as possible. Once the VOPEX is up and running, the video quality can be re-adjusted at any time by pressing the recessed "Video Adjust" button. (See Fig. 16) Using a non-conductive pointed object, a momentary press of the button will force the system to automatically re-adjust the video quality.

Note: Video quality adjustment of the VOPEX-C5V-x or VOPEX-C5SV-x is performed manually at the Receiver. See "Video Quality Adjustment for VOPEX-C5V-x / -C5SV-x" below.

VOPEX-C5VA-x (Front View)

Figure 16- Video Adjust button for manual video quality adjustment

Video quality may need to be re-adjusted if any of the following situations occur:

- A CAT5 cable is replaced, for any reason
- A new XTENDEX Receiver is connected to the system
- CAT5 cable becomes disconnected from the VOPEX or any of the Receivers

Note: When the cable is longer than 300 feet some colored lines can be seen at the black-to-white transitions. This is a normal behavior and is caused by the different twisting rates of each pair of wires in the CAT5 cable.

VOPEX-C5V-x / -C5SV-x / -M12V-4

Video quality adjustment of the VOPEX-C5V-x, VOPEX-C5SV-x and VOPEX-M12V-4 is performed manually at the Receiver.

It is possible that on initial startup the image on the monitor will not be as crisp as the image normally is. This is due to the frequency characteristics of the CAT5 cable. It may be necessary to press the "+" or "-" buttons on the Receiver (see Fig. 17) until the image is crisp and clear. Press the "+" button if the image is not crisp and clear enough. Press the "-" button if the image has been over-corrected (such that horizontal lines appear to trail or shadow at the edge of an open window). A momentary press of either button will make a minor change in the image. If either button is pressed and held, the changes made will be gradual and continuous. Ultimately, the image quality should improve to a satisfactory level. Once the adjustment is made, it should not be necessary to change it again as the new settings are stored in memory and become the default settings with each startup.

Note: When the cable is longer than 300 feet some colored lines can be seen at the black-to-white transitions. This is a normal behavior and is caused by the different twisting rates of each pair of wires in the CAT5 cable.

Side view of XTENDEX Receiver

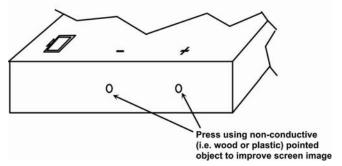


Figure 17- Video quality adjustment buttons on XTENDEX Receiver

TECHNICAL SPECIFICATIONS

VOPEX-	C5VA / -C5V Models			
Maximum Resolution		See chart next page		
Video Compatibility		SVGA, XGA, VGA		
Video Connectors		HD15 female for monitor connection		
		HD15 male for CPU video connection		
VOPEX-	C5SVA / -C5SV Models			
Maximur	n Resolution	800 x 600 - up to 600 feet		
(refresh	frequency 60Hz)			
Video Co	ompatibility	All s-video displays and sources		
Video Co	onnectors	4-pin miniDIN female		
All Abov	ve Models			
Video Q	uality Adjustment	Automatic, for up to 600 feet of CAT5 cable, with manual override (video quality adjustment can only be performed manually at the Receiver for VOPEX-C5V / -C5SV)		
Video Co	oupling	DC		
	aximum I/O Levels	1.45Vp-p		
	output Impedance	75 Ohms		
	rizontal Frequency Range	15kHz to 130 kHz		
	rtical Frequency Range	30 Hz to 150 Hz		
	pes Supported	Separate and composite TTL Level and sync on green		
Audio Co	onnectors	3.5mm female stereo audio connectors		
Signal T	уре	Line Level, stereo, unbalanced		
Audio Fr	equency Response	20Hz to 20Khz, <u>+</u> 1dB		
	o-noise ratio	76 dBA		
Total Ha	rmonic Distortion and Noise	0.017%		
Stereo C		-70 dB		
	aximum I/O Levels	3.1Vp-p		
	mpedance	Max 2K Ohms, unbalanced		
THD+N		0.017%,F=20-20KHz, RL=2K Ohm, Vout=1 Vrms		
VOPEX-	C5HDA/-C5HDTV Models			
Video Co	ompatibility	HDTV Component- Y,Pb, Pr		
Connect	ors	RCA		
Video Ma	aximum I/O Levels	1.45Vp-p (no offset)		
Input / O	output Impedance	75 Ohms		
Maximur	m Resolutions	1080i and 720p @ 600ft 1080p @ 400ft		
Stereo	Signal Type	Line Level, stereo, unbalanced		
Audio	Audio Connectors	RCA		
	Audio Frequency Response	20Hz to 20Khz, <u>+</u> 1dB		
	Signal-to-Noise Ratio (SNR)	76 dBA		
	Total Harmonic Distortion and	0.017%		
	Noise			
	Stereo Crosstalk	-70 dB		
Audio Maximum I/O Levels		3.1Vp-p		
Output Impedance		Max 2K Ohms, unbalanced		
Digital	Signal Type	S/PDIF		
Audio	Connectors	RCA		
	Input/Output Level	0.5 Vp-p		
	Input / Output Impedance	75 Ohms		

NTI EXTENDEX SERIES SPLITTER/EXTENDER

General (All Above Models)	
Interconnect Cable	CAT5/5e Solid UTP EIA/TIA 568B wiring w/ male RJ45 connectors
VOPEX-C5 Power	120V or 240V at 50 or 60Hz-9VDC/1.5A via AC Adapter
VOPEX-C5V(A)-4/8C Power	120V or 240V at 50 or 60Hz-5VDC/3A via AC Adapter
Receiver Power	120V or 240V at 50 or 60Hz-9VDC/ 1.0A via AC Adapter
AC Adapter Power Connector	2.1 x 5mm connector, center positive
Operating Temperature Range	32°F to 100°F (0°C to 38°C)
VOPEX Size (In.) WxDxH	
VOPEX-C5V(A)-x	8.5x6x2.5
VOPEX-C5V(A)-4C	5.1x3.4x1.1
VOPEX-C5V(A)-8C	5.1x3.4x1.7
XTENDEX Receiver Size (In.) WxDxH	3.25x3.4x1

VOPEX-M12V-4	
Maximum Resolution	See chart below
Video Compatibility	SVGA, XGA, VGA
Video Connectors	HD15 female for monitor connection
	HD15 male for CPU video connection
CAT5 Connectors	M12 Female
VOPEX-M12V-4 Power	18-36VDC, 1.0A
ST-M12V-R-600 Power	18-36VDC, 1.0A
Operating Temperature Range	-4°F to 158°F (-20°C to 70°C)
VOPEX Size (In.) WxDxH	5.6x3.5x1.7
XTENDEX Receiver Size (In.) WxDxH	3.25x3.4x1
Interconnect Cable	CAT5 shielded stranded EXANE cable

Distances and Resolutions for CAT5/CAT5e and CAT6 Cables (VOPEX-C5VA / -C5V ONLY)

CABLE	DISTANCE (feet)	RESOLUTION
CAT5/CAT5e (UTP)	600	1024x768 at 60Hz
CAT5/CAT5e (UTP)	400	1280x1024 at 60Hz
CAT5/CAT5e (UTP)	300	1600x1200 at 60Hz
CAT5/CAT5e (UTP)	100	1920x1440 at 60Hz
CAT6 (UTP)	300	1024x768 at 60Hz
CAT6 (UTP)	200	1280x1024 at 60Hz
CAT6 (UTP)	100	1920x1440 at 60Hz

Distances and Resolutions for CAT5 EXANE Cable (VOPEX-M12V-4 ONLY)

DISTANCE (feet)	RESOLUTION	
200	1280x1024 at 60Hz	
100	1920x1440 at 60Hz	
50	1920x1440 at 60Hz	

INTERCONNECTION CABLE WIRING METHOD

The connection cable between the VOPEX and each XTENDEX Receiver is terminated with either RJ45 connectors or M12 connectors (see installation instruction for you model) and must be wired according to the EIA/TIA 568B industry standard. Wiring is as per the tables and drawings below.

	-		
Pin	Wire Color	Pair	Function
1	White/Orange	2	Т
2	Orange	2	R
3	White/Green	3	Т
4	Blue	1	R
5	White/Blue	1	Т
6	Green	3	R
7	White/Brown	4	Т
8	Brown	4	R

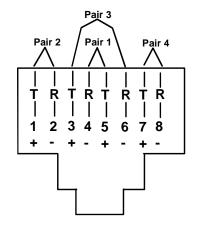


Figure 18- View looking into RJ45 female

Note: CAT5 connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products should not be run underground, outdoors or between buildings.


WARNING: Outdoor or underground runs of CAT5 cable could be dangerous and will void the warranty.

M12 Connector Wiring

RJ45 Connector Wiring





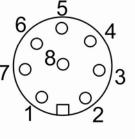

CAT5 CABLE WIRE	M12 CONNECTOR PIN
WHITE/ORANGE	6
ORANGE	4
WHITE/GREEN	5
BLUE	7
WHITE/BLUE	1
GREEN	8
WHITE/BROWN	2
BROWN	3

TROUBLESHOOTING

Each and every piece of every product produced by Network Technologies Inc is 100% tested to exacting specifications. We make every effort to insure trouble-free installation and operation of our products. If problems are experienced while installing this product, please look over the troubleshooting chart below to see if perhaps we can answer any questions that arise. If the answer is not found in the chart, please check the FAQs (Frequently Asked Questions) at our website at http://www.networktechinc.com or contact us directly for help at 1-800-742-8324 (800-RGB-TECH) in US & Canada or 1-330-562-7070 worldwide. We will be happy to assist in any way we can.

Problem	Cause	Solution
VOPEX or XTENDEX power LED does not illuminate	Power supply is not connected or plugged-in.	 Make sure each outlet is live and the AC adapters are plugged-in. (one for each Remote and one for the VOPEX) Make sure DC plugs are fully connected
No video on monitor/display	 One or more video cables is loose or disconnected. No power to the VOPEX or the XTENDEX Receiver. Video Cable was not attached when CPU was booted. CAT5 cable is not connected. 	 Check all video cable connections Make sure power LEDs are illuminated for local and remote. If not, see solution for problem above. With all the cables properly connected, reboot the CPU. Check cable connections. Make sure they are snapped-in properly and completely and reboot.
The picture on the monitor is black and white, rather than color	The video cable was not attached to the CPU when it was booted.	With the cables all properly connected, reboot the CPU.
Monitor sometimes loses sync, causing it to go blank for a second or two	 Electrical power system is very noisy, particularly the ground. The CAT5 cable is not properly connected. 	 Make sure the interconnection cable is not near any power lines. Check cable connections. Make sure they are snapped-in properly and completely.
A constant vertical wobble appears down the screen	 CAT5 cable is too close to a strong power source. Monitor is too close to a power source or another monitor. 	 Reroute CAT5 cable if possible. Move the monitor
Video picture is not sharp or is smeared	 All Video Cables are not firmly seated. CAT5 cable is too long. The CAT5 cable is not properly connected. A cabling change has been made while the system was powered. A new receiver was connected while the system was powered Video was not manually adjusted 	 Check all connections. Make sure all cables are fully seated. Verify length is within specified limits-600'. Check cable connections. Make sure they are snapped-in properly and completely. Press the "Video Adjust" button. (See "Video Quality" on page 18.) Press the "Video Adjust" button. (See "Video Quality" on page 18.) Adjust video at the receiver (See "Video Quality" on page 18.)
No audio	 Audio cable is not properly plugged in Speakers are not plugged in CAT5 cable is not properly connected 	 Check all cable connections Verify speakers are powered (if applicable) Check CAT5 cable connections

WARRANTY INFORMATION

The warranty period on this product (parts and labor) is two (2) years from the date of purchase. Please contact Network Technologies Inc at **(800) 742-8324** (800-RGB-TECH) or **(330) 562-7070** or visit our website at http://www.networktechinc.com for information regarding repairs and/or returns. A return authorization number is required for all repairs/returns.

Manual 071 Rev. 3/21/12